


TEAK BOK OUTDOOR DINING TABLE


CODE	DESCRIPTION
10269	TEAK BOK OUTDOOR DINING TABLE 162/80/76
10270	TEAK BOK OUTDOOR DINING TABLE 200/100/76
10271	TEAK BOK OUTDOOR DINING TABLE 250/100/76
10272	TEAK BOK OUTDOOR DINING TABLE 300/110/76
10276	TEAK BOK BLACK OUTDOOR DINING TABLE 162/80/76
10277	TEAK BOK BLACK OUTDOOR DINING TABLE 200/100/76
10278	TEAK BOK BLACK OUTDOOR DINING TABLE 250/100/76
10279	TEAK BOK BLACK OUTDOOR DINING TABLE 300/110/76
10296	TEAK BOK OUTDOOR SQUARE DINING TABLE 80/80/76

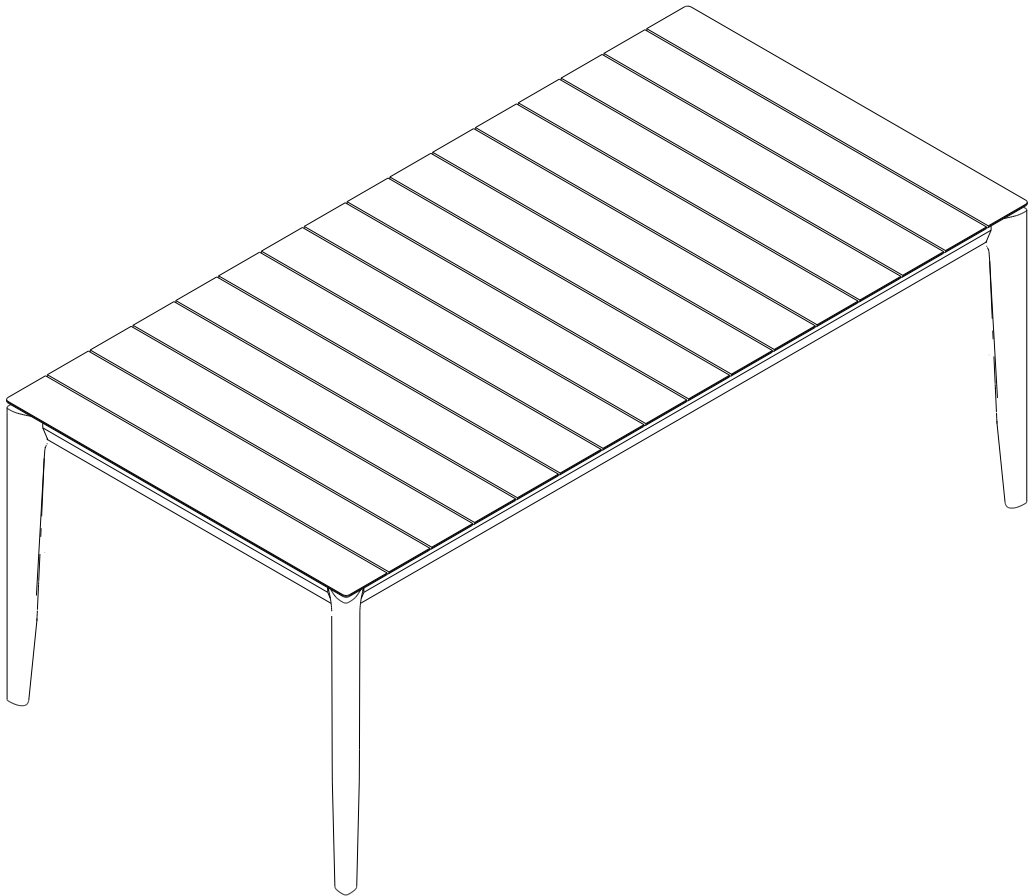

TEAK BOK OUTDOOR DINING TABLE ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION



NOTE

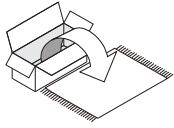

- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND /OR HARDWARE.




- READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN.
- SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATIONS OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.



- IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 2 PERSONS.

PARTS TO ASSEMBLE

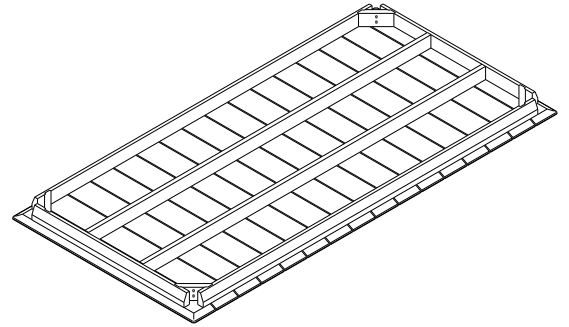

A TABLE TOP 1piece


CODE	DESCRIPTION
P1042	TABLE TOP 162x80
P1010	TABLE TOP 200x100
P1011	TABLE TOP 250x100
P1014	TABLE TOP 300x110
P1061	TABLE TOP - BLACK 162x80
P1062	TABLE TOP - BLACK 200x100
P1063	TABLE TOP - BLACK 250x100
P1064	TABLE TOP - BLACK 300x110
P1068	TABLE TOP 80x80

HARDWARE ENCLOSED

H2070 SPAX SCREW M6x120 (8pcs)	H2103 WASHER M8x23 (8pcs)	H2154 SPRING WASHER M8 (8pcs)
---	--	--

TOOL

(Included in packaged)

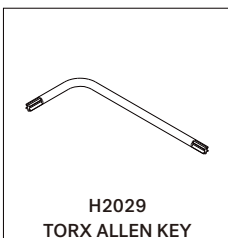


B LEG (INTERCHANGEABLE) 4pieces

CODE	DESCRIPTION
P1012	LEG FOR 80, 162 & 200 LENGTH
P1013	LEG FOR 250 & 300 LENGTH
P1065	LEG - BLACK FOR 162 & 200 LENGTH
P1066	LEG - BLACK FOR 250 & 300 LENGTH

SYMBOLS



 
DIRECTION



NUMBER OF
PERSONS NEEDED



USE HAND

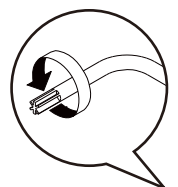



USE TORX ALLEN SCREW
TO TIGHTEN

TEAK BOK OUTDOOR DINING TABLE

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION





A CONNECTING LEGS TO TABLE TOP

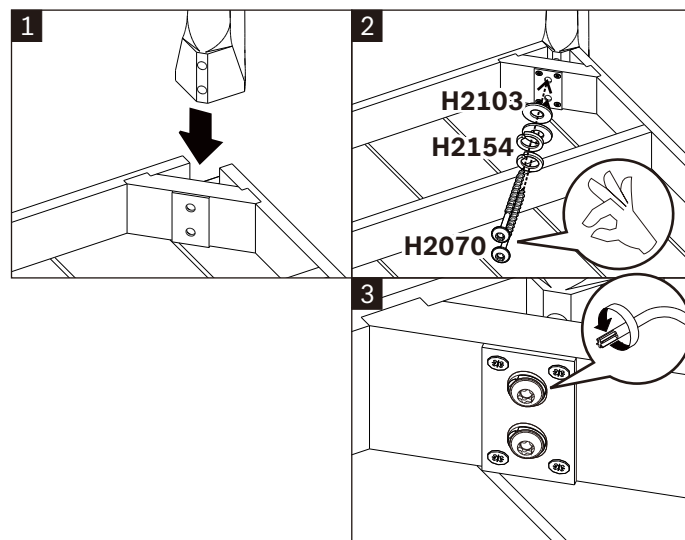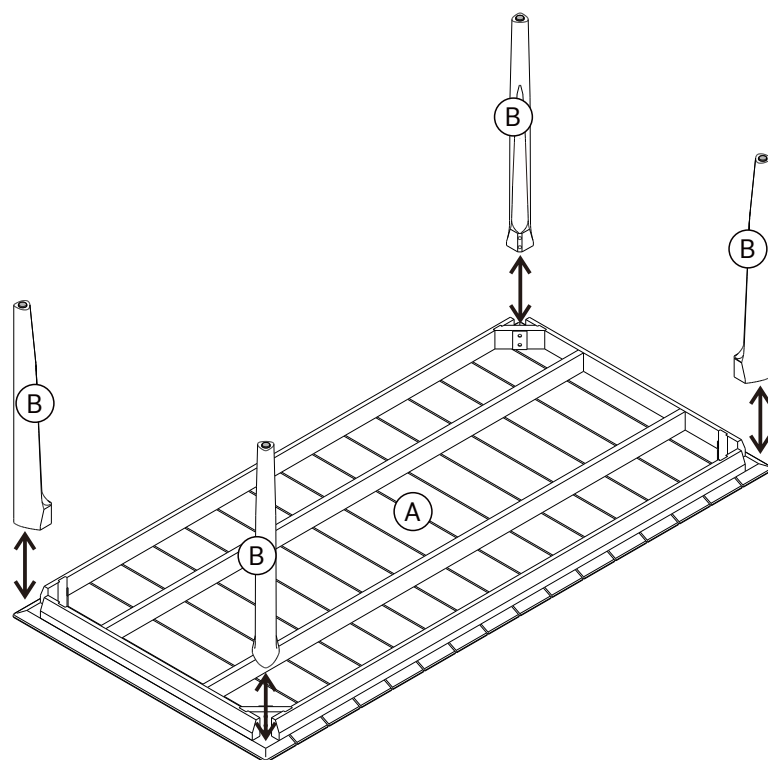

- DO NOT TIGHTEN SCREWS TOO MUCH INITIALLY
- TO BE CHECKED AND RE-ADJUSTED AFTER 15 DAYS OF USE
- REPEAT STEPS 1-3 ON REMAINING LEGS

B MODIFY THE ADJUSTABLE GLIDES

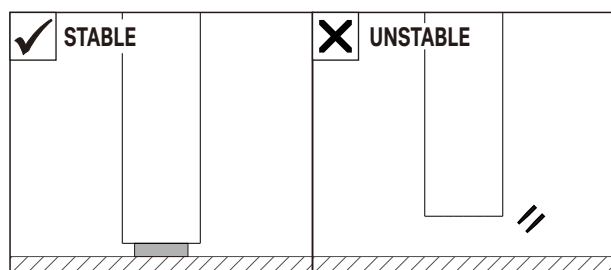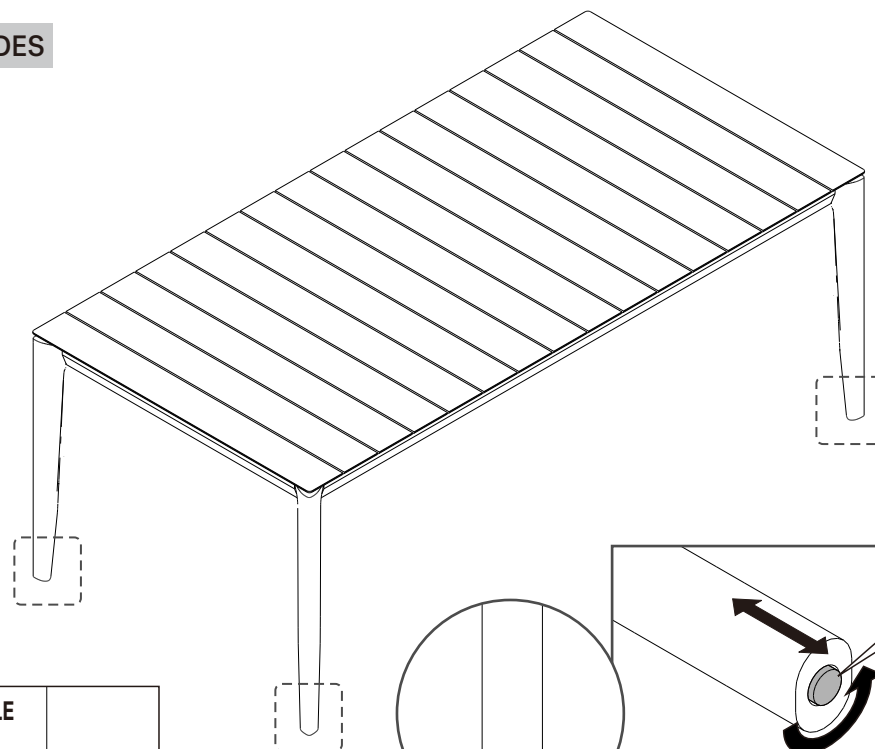

NOTE :

TO ENSURE STABILITY, ALL GLIDES SHOULD BE ADJUSTED TO MAKE EVEN CONTACT WITH THE SURFACE UNDERFOOT.

