


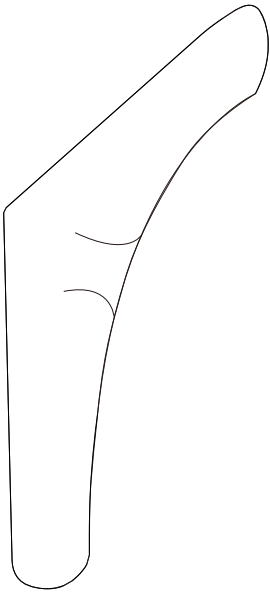

PI WALL HANGER

CODE	DESCRIPTION
29765	MAHOGANY PI WALL HANGER VARNISHED 3/8/21
29775	MAHOGANY PI WALL HANGER DARK BROWN 3/8/21
29865	SYCAMORE PI WALL HANGER VARNISHED 3/8/21




PI WALL HANGER

ASSEMBLY INSTRUCTIONS FOR WALL HANGER INSTALLATION




NOTE

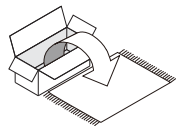

CAREFULLY OPEN THE CARTON, REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.



CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED. DO NOT USE DAMAGED OR DEFECTIVE PARTS/ HARDWARE. CONTACT ETHNICRAFT FOR ANY MISSING PART AND OR HARDWARE.



X1


READ THE ASSEMBLY INSTRUCTIONS BEFORE INSTALLATION AND CAREFULLY FOLLOW THE GIVEN INSTRUCTIONS. SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THIS INSTALLATION OR HAVE ANY DOUBTS ABOUT ITS SAFETY.

IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 1 PERSON.




MAXIMUM LOAD PER HANGER IS 5 KG

PARTS TO ASSEMBLE

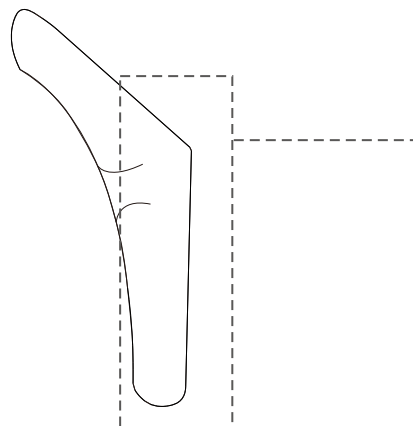


WALL HANGER 2pieces

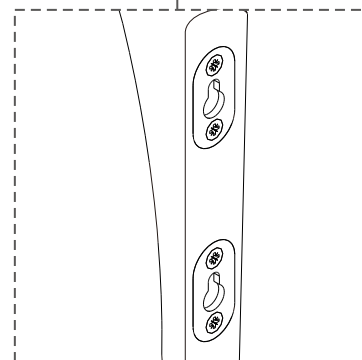


HARDWARE ENCLOSED

(Included in packaged)




H2177
PAB SCREW
6x25 mm
(4pcs)

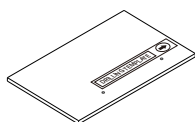

DRILLING TEMPLATE
(1pc)

HARDWARE REQUIRED

(Not included in packaged)




WALL PLUG
S6
(4pcs)

TOOLS


(Not included in packaged)




PHILLIPS SCREWDRIVER

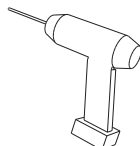

DRILL

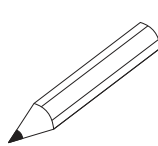

PENCIL

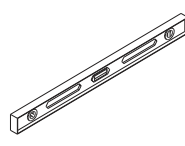


LEVEL


SYMBOLS




DIRECTION




NUMBER OF
PERSONS NEEDED

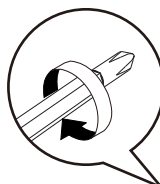

USE PHILLIPS SCREWDRIVER
TO TIGHTEN

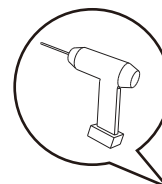

USE
DRILL

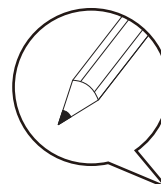



USE PENCIL

PI WALL HANGER

ASSEMBLY INSTRUCTIONS FOR WALL HANGER INSTALLATION



A INSTALLING SCREWS INTO THE WALL

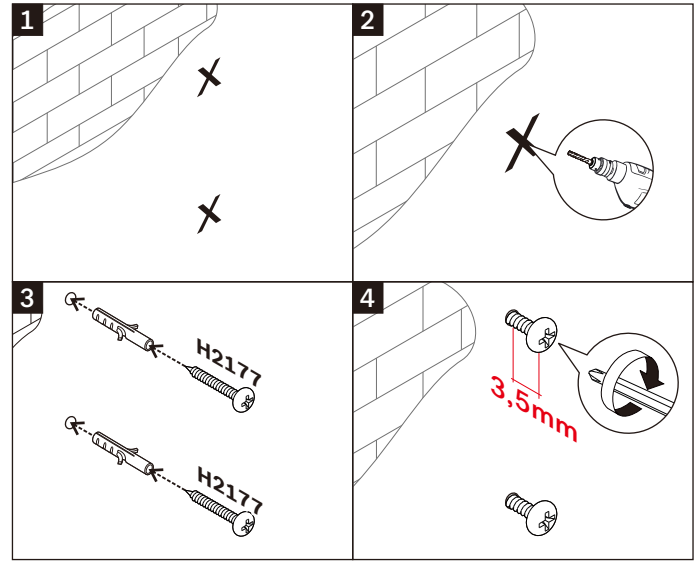
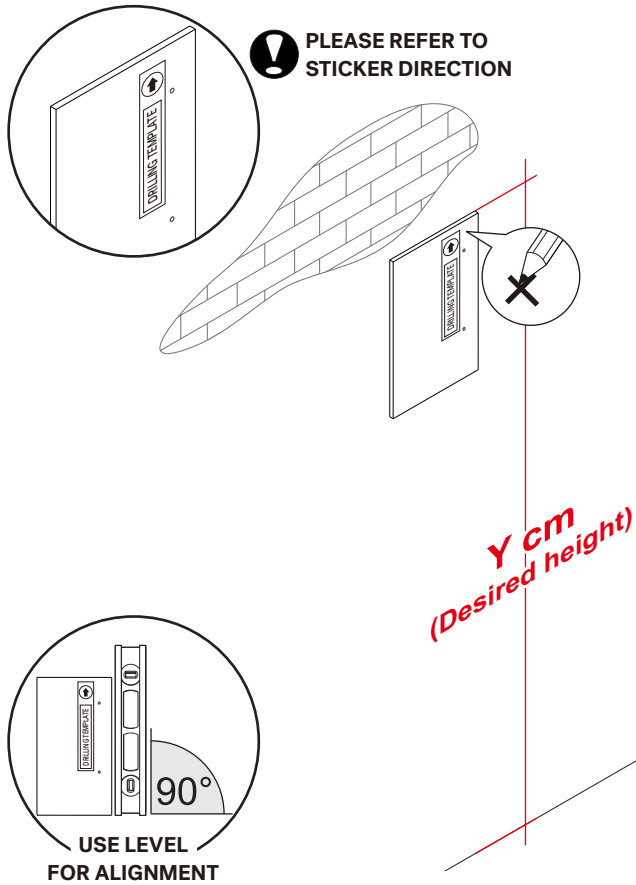


- USE WALL PLUG S6 (4X)
- USE PAB SCREW 6x25 mm (4X)
- LEAVE A GAP OF ± 3.5 mm BETWEEN THE SCREW AND THE WALL.



AS WALL MATERIALS VARY, WALL PLUG FOR FIXING TO WALL ARE NOT INCLUDED. FOR ADVICE ON SUITABLE SCREW SYSTEMS, CONTACT YOUR LOCAL SPECIALISED DEALER.

B INSTALLING WALL HANGER

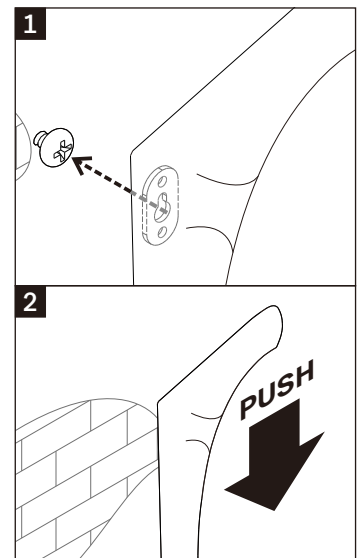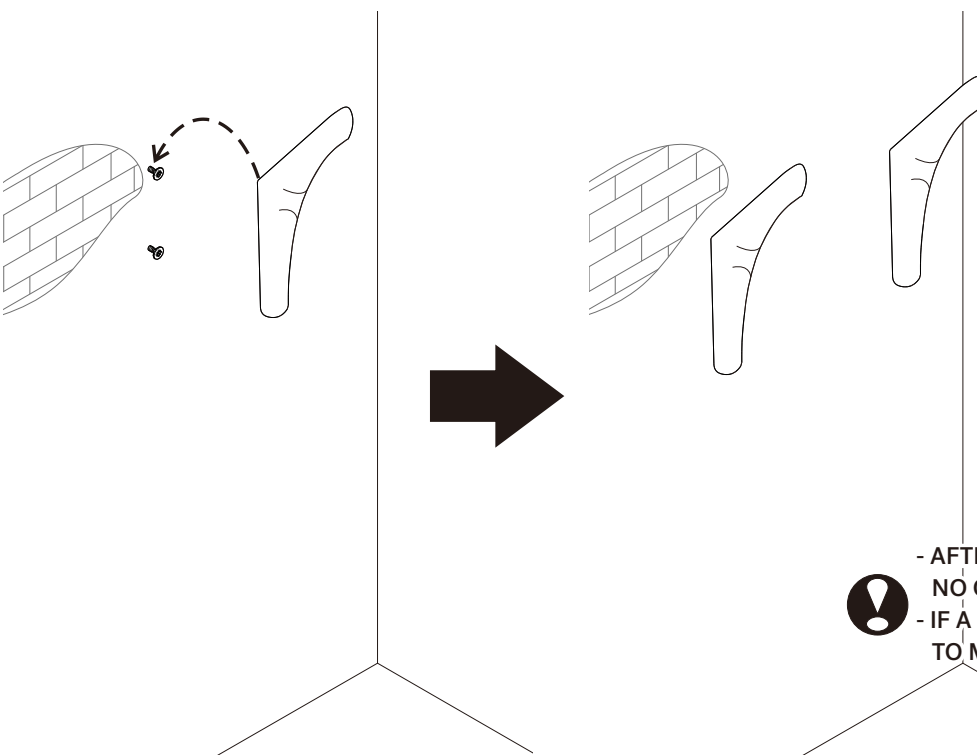

- AFTER ASSEMBLY, THERE SHOULD BE NO GAP BETWEEN THE WALL AND THE HANGER.
- IF A GAP IS FOUND, TIGHTEN THE SCREW FURTHER TO MINIMIZE IT.